

WiComm Pro Wireless Device RF Transmissions

Wireless Device	Transmission procedure
2-Way LCD Keypad	Press a and a simultaneously for at least 2 seconds
2-Way Panda Keypad	Press and simultaneously for at least 2 seconds.
2-Way Slim Keypad	Press and is simultaneously for at least 2 seconds.
PIR Detectors: PIR PIR camera PIR-pet PIR-pet camera	Press the tamper switch for 3 seconds.
Curtain Detector	After inserting battery, close the bracket and wait 3 seconds.
1-Way magnetic Contact Detectors	Press the tamper switch for 3 seconds.
2-Way Magnetic Contacts Detectors	Press the tamper switch for 3 seconds. NOTE: After programming parameters for this device and exiting Programming mode, press the Tamper switch for 3 seconds, and then wait 1 minute for the main panel to download the parameters from the detector.
2-Way Remote Control	Press and simultaneously for at least 2 seconds
1-Way Keyfob	Click for at least 2 seconds
Wireless 2-Way Smoke Alarm & Heat Detector	Press the tamper switch for 3 seconds.
WL 2-Way Indoor Siren	Press the tamper switch for 3 seconds.
Siren	Press the reset switch on the siren. After a squawk sounds, within 10 seconds press tamper switch for at least 3 seconds.
2-Button Panic Keyfob	Press both buttons for at least 7 seconds
Wrist Band Panic Transmitter	Press the button for at least 7 seconds.