

L BRACKET INSTALLATION GUIDE

Please read the manual before use and keep for future reference


CE FC RoHS

Specification


Model	Size (unit:mm)	Suitable For	Used With	Weight
NEMLB2 NEMLB2B	249L x 48W x 28.5H	Narrow door	Neptune 280 Series Maglocks	0.27kg
NEMLB5 NEMLB5B	264L x 70W x 42H	Narrow door	Neptune 500 Series Maglocks	0.58kg

Installation

- 1. L bracket is required for armature plate installation when the door frame width is less than 42mm.
- 2. Remove the mounting plate from lock body.
- 3. Fix the L bracket on to the door frame.
- 4. Use the Allen key to fix the lock body onto the L Bracket.

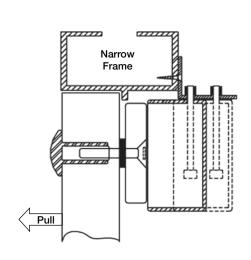

Narrow door frame (swing out)

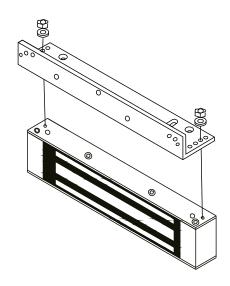

L bracket lock installation