

L & Z BRACKET INSTALLATION GUIDE

Please read the manual before use and keep for future reference


CE FC RoHS

Specification

Model	Size (unit:mm)	Suitable For	Used With	Weight
NEMLB3 NEMLB3B	Z: 180L x 50W x 50H L: 249L x 48W x 28.5H	Inward-opening, narrow frame and metal doors	Neptune 280 Series Maglocks	0.75kg
NEMLB6 NEMLB6B	Z: 185L x 60W x 60H L: 265L x 70W x 42H	Inward-opening, narrow frame and metal doors	Neptune 500 Series Maglocks	1.3kg

Installation

- 1. For inward opening doors, first install the lock body inside and then you will need to install the LZ bracket.
- 2. Remove the mounting plate from lock body.
- 3. Fix the L bracket on the door frame and then fix the lock body on the L bracket.
- 4. Assemble the Z bracket and then fix it to the door frame.
- 5. Fix the armature plate on to the Z bracket.

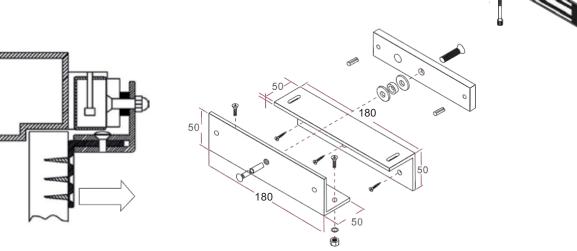

Inward opening door installation

*Neptune 280 Series Maglock dimensions